

If using windows, you can confirm controller is recognized by:

Plug in controller your computer should update itself with “new HID installed”

Go to “control panel” and select “printers and other hardware”

Select “game controllers” and “(S)NES/Atari\_USB” should be displayed with status “OK.”

Some versions of windows will allow you to select properties and under the test tab you can hit the buttons on the controller and verify their response on the screen.

Most likely: start=3, select=4, B=2, and A=1

However when setting up the controller with the computer program, it associates to a number one less than that found in the previous step. IE: **start=2, select=3, B=1, and A=0.**

This may not necessarily be true but you should be able to guess and check till you find the right combo they should all be less than 8.

If your having difficulty, just do a quick search for FCE Ultra. It has a nice feature that recognizes which button you pressed to program the remote and can be downloaded and installed easily, I like to use it to play my favorite classics.

Feel free to call me if your having difficulty at (320)491-9166 (Paul)

Thanks for you purchase!

-InfiniteNesLives

Visit [www.InfiniteNesLives.com](http://www.InfiniteNesLives.com) for future purchases at discount!