

# N64 to GC/Wii Classic Controller Button Mapping

The following table describes how the adapter can translate N64 buttons to Gamecube buttons and/or axes.

	Default	'L' held	'R' held	'L+R' held	'C up' held	'C down' held	'C left' held	'C right' held
<b>Gamecube</b>	<b>N64</b>	<b>N64</b>	<b>N64</b>	<b>N64</b>	<b>N64</b>	<b>N64</b>	<b>N64</b>	<b>N64</b>
Analog stick	Analog stick	Analog stick	Analog stick	Analog stick	Analog stick	Analog stick	Analog stick	Analog stick
Digital Up	Digital Up	Digital Up	Digital Up	Digital Up	Digital Up	L	Digital Up	Digital Up
Digital Down	Digital Down	Digital Down	Digital Down	Digital Down	Digital Down	Digital Down	Digital Down	Digital Down
Digital Left	Digital Left	Digital Left	Digital Left	Digital Left	Digital Left	Digital Left	Digital Left	Digital Left
Digital Right	Digital Right	Digital Right	Digital Right	Digital Right	Digital Right	Digital Right	Digital Right	Digital Right
Start	Start	Start	Start	Start	Start	Start	Start	Start
A	A	A	A	A	A	A	A	A
B	B	B	B	B	B	B	B	B
X			C button right	C button right	C button down	C button down	C button down	C button left
Y			C button left	C button left	C button left	C button left		C button down
L	Z	L	Z	L	Z	Z	Z	L
R	R	R	R	R	L	Digital Up	L	Z
Z	L	Z	L	Z	R	R	R	R
C stick up	C button up	C button up	C button up	C button up	C button up	C button up	C button up	C button up
C stick down	C button down	C button down	C button down	C button down				
C stick left	C button left	C button left					C button left	
C stick right	C button right	C button right			C button right	C button right	C button right	C button right

## Using alternate mappings

- ▶ Alternate mappings are activated by holding the appropriate N64 button(s) when the adapter gets powered :

*1) Hold appropriate button, 2) Connect to a powered console, 3) Release button.*

- ▶ The adapter stays in alternate mapping mode as long as it is powered.
- ▶ Disconnect and reconnect to revert to default mapping or change mapping.
- ▶ Disconnecting the console power also works, but beware of the Wii which does not remove power from controllers in standby mode.

## Adjusting Analog stick sensitivity

- ▶ The sensitivity is increased by holding the **'Digital right'** button when the adapter gets powered.
- ▶ The sensitivity is decreased by holding the **'Digital left'** button when the adapter gets powered.